

**Mod Plug Part Numbers**  
 CN-RJ45-EZ  
 CN-C6-EZ



**EZ-RJ45®**  
 Instructions  
 For use with EZ-RJ45®  
 Cat 5e & Cat Connectors

5. Double check wiring sequence now.


T568A/T568B Wiring Chart

Wire#	1	2	3	4	5	6	7	8
T568A	W/G	G	W/O	BL	W/BL	O	W/BR	BR
T568B	W/O	O	W/G	BL	W/BL	G	W/BR	BR

1. Strip off approximately two inches of outer cable jacket

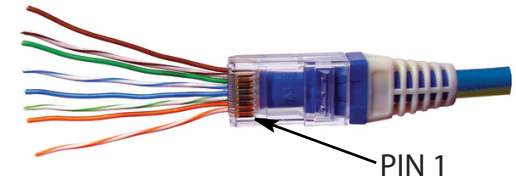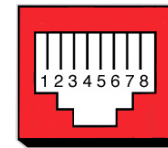

2. Untwist & straighten wires. Place in desired order. See color code wiring chart. (5)




6. Push the EZ-RJ45® connector into the EZ-RJ45® Crimp Tool. Make sure the connector is fully seated in crimp cavity.

3. Trim wire ends so all conductors are equal length and uniform. Use built in wire cutter in EZ-RJ45® Crimp Tool.



7. Actuate the EZ-RJ45® Tool to crimp and trim wires. Break off any remaining loose wires.

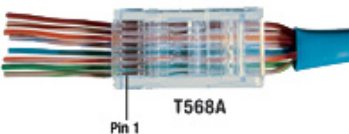

4. Insert wires into the EZ-RJ45® Connector and pull connector down over the cable jacket. Cable jacket should seat snugly in rear of connector.

**Crimp Tools Part Numbers**

TO-100004  
 TO-100044

